




1. Loose screw

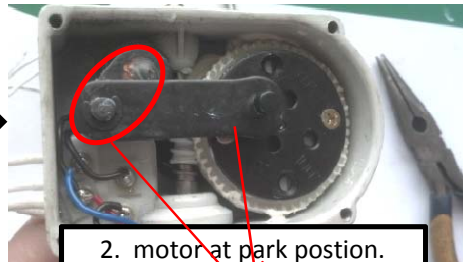

2. motor at park position.
link is in horizontal direction,
rock arm towards left



3. remove circlip



6. at this moment, the 90°
hole is towards worm shaft




5. loose screw



4. take off the link



7. rotate angle plate,
and fix the one you need
towards worm shaft

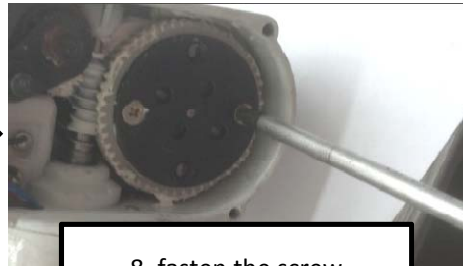

8. fasten the screw



9. put the circlip back



11. put the seal back and
fasten the screw



10. put the link back, which
is still in horizontal direction,
rock arm towards left

